

NOTE: If you received a control module <u>AND</u> throttle, make sure to replace <u>BOTH</u> parts on your unit.

Tools Required: (Not included)

- A. Phillips head screwdriver
- B. 4mm Allen wrench
- C. 5mm Allen wrench
- D. 10mm open wrench

CAUTION: To avoid potential shock or other injury, turn power switch <u>OFF</u> and disconnect charger before attempting these procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 5mm Allen wrench and 10mm open wrench, remove the four hex bolts that hold the fairing in place.

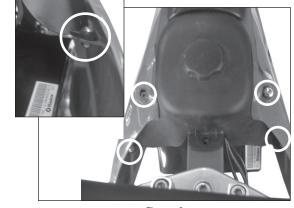


Figure 1

Step 2

Using a 5mm Allen wrench and a 10mm open wrench, remove the two hex bolts underneath the seat. Remove the fairing from the unit.


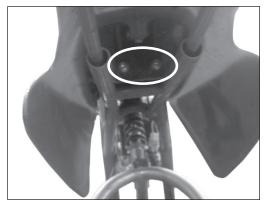


Figure 2


Step 3

Remove the four Phillip screws that hold the battery cover: two on the bottom and two towards the front. Using a 4mm Allen wrench, remove the two hex bolts on top of the battery cover.

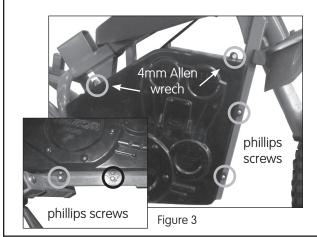

Step 4

Carefully cut the zip ties holding the wires together. Disconnect the six white plastic connectors attached to the control module by depressing the tab.

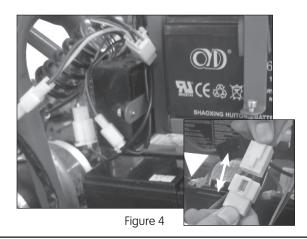

Step 5

Using a 4mm Allen wrench, remove the two bolts holding the control module in place and remove part.



Figure 5

Step 6

Install the new control module using the same two bolts previously removed. Reconnect the six white plastic connectors.

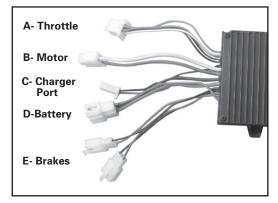


Figure 6

Step 7

Reverse steps:

- 1. Replace the battery cover.
- 2. Reattach the battery cover and fairing using the same hardware previously removed.

ATTENTION: Charge unit at least 18 hours before riding.