



PowerWise™

Electric Scooter

Read Instructions Before Using Your New Electric Scooter

OWNER'S MANUAL



Stand-Up
Electric Scooter
Model 09360

NOTICE!

**Before using your new Electric Scooter the first time,
charge the battery a minimum of 12 hours.**

Always recharge the battery before the power indicator shows no power.

Failure to follow these instructions nullifies any warranty, whether stated or implied.

Before operating your Electric Scooter

FAILURE TO FOLLOW THESE INSTRUCTIONS NULLIFIES ANY WARRANTY, WHETHER STATED OR IMPLIED.

1. Before operating the new Electric Scooter, charge the battery for 12 hours, but not in excess of 18 hours!
2. Your Electric Scooter is equipped with a Battery Power indicator that will warn you of low battery power with a beeping sound. This will occur when the battery power drops below 20.5 V. Recharge the battery immediately.
3. Always recharge the battery before the power indicator shows no power.



This product does not conform to Federal Motor Vehicles Standards and is not intended for operation on public streets, roads or highways. Serious injury can result from the unsafe operations of this vehicle.

This product is not designed to be jumped. If jumped, even from the curb, the scooter frame could break causing serious injury or death. If jumped, warranty is void.

Do not operate this product in traffic, on wet, frozen, oily or unpaved surfaces or under the influence of drugs and/or alcohol. Avoid uneven surfaces, potholes, surface cracks and obstacles.

It is recommended that the rider wear leather gloves, knee pads and leather boots. Always wear a DOT approved helmet.

Never carry passengers on your Electric Scooter

Minimum recommended age 16 years

Weight Limit 225 lbs.

Check your state and local laws governing the use of motorized vehicles in your area.

American Power Products, Inc. is not responsible for your failure to comply with state and local ordinances relating to the use of the Electric Scooter.

Failure to follow these operation instructions can result in serious injury or death.

CHARGING THE ELECTRIC SCOOTER BATTERY

1. To avoid damage to the battery when charging, use only the charger provided with your Electric Scooter. Scooter should be off when charging.
2. Plug the supplied 12V battery charger into a 110V AC power source. Use only 110V AC outlet when charging the Zooma Electric Scooter battery.
3. The CHARGER INDICATOR LIGHT will illuminate confirming that power is connected.
4. Plug the POWER INPUT CORD to the charging socket on your Electric Scooter.
5. When the battery is fully charged, the Red Indicator Light will turn Green.
6. Disconnect the Input Cord from the Charging Socket.
7. Disconnect the charger from the 110V power source.
8. Never leave the battery charger connected to the 110V power source when not charging the battery. This will shorten the life of the charger.
9. When storing your Electric Scooter, the battery should be charged monthly.



FAILURE TO KEEP THE ELECTRIC SCOOTER BATTERY CHARGED WILL CAUSE TOTAL BATTERY FAILURE. DO NOT ALLOW BATTERY TO FULLY DISCHARGE.

BATTERY DISPOSAL

When maintained properly, the Lead Acid Battery in this product has a normal life of many years. When the battery expires, it should be removed from the Electric Scooter and recycled. Please contact your local solid waste authority for recycling information in your area.


NOTICE: AFTER REMOVAL, COVER BATTERY TERMINALS WITH ELECTRICAL TAPE TO PREVENT SPARK HAZARD FROM SHORTING OF THE TERMINALS.

ASSEMBLY INSTRUCTIONS

1. Remove the Electric Scooter from the shipping carton.
2. Lift handlebars and tighten bolt.
3. Completely check all fittings, brakes and bolts prior to operation. Tighten if necessary.
4. Fully charge battery before operating.
5. Check the pressure to verify it is 85 PSI.

ELECTRIC SCOOTER SPECIFICATIONS

SPECIFICATIONS	
Maximum Speed	15 MPH
Minimum Distance	30 Miles
Recharge Time	Less than 5 Hours
Load Capacity	225 lbs.
Tires	Wide 9" Pneumatic
Dimensions	48 x 15.5 x 40.5
Motor	350W
Transmission	Chain Drive
Battery	12V 24AHx2
Ignition	On/Off Toggle Switch

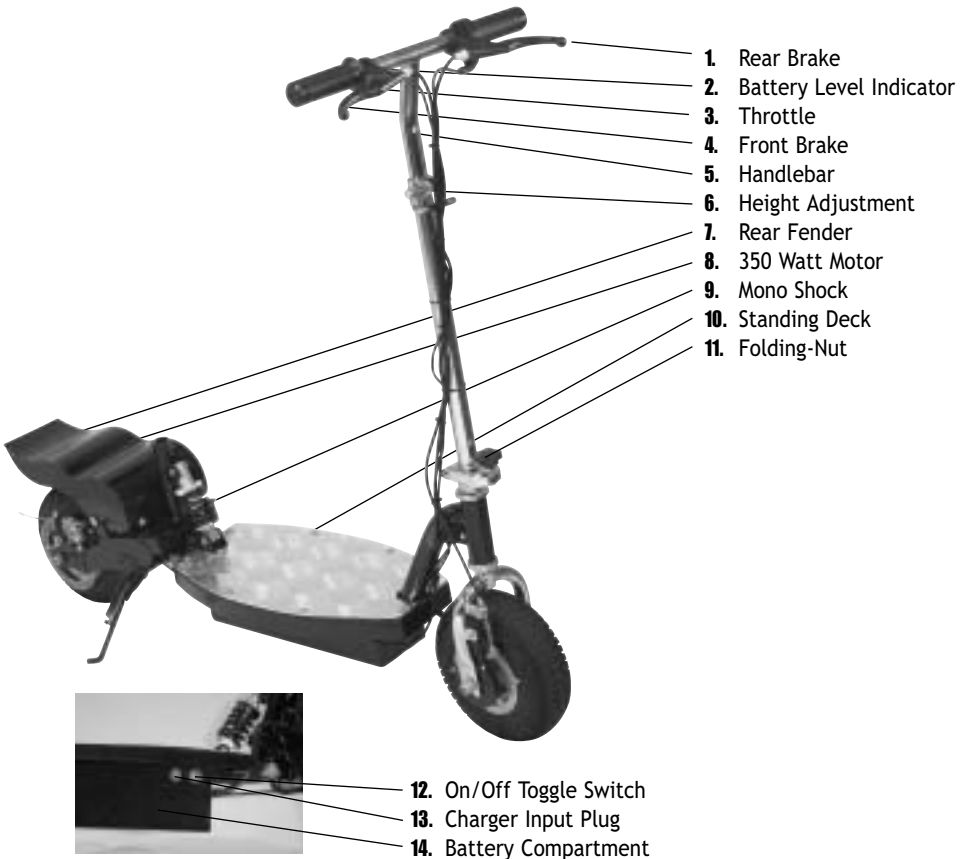

If there is a problem with your Electric scooter, DO NOT attempt to return to the retailer, call American Power Products, Inc. at 800-533-2929

MAINTENANCE AND INSPECTION

1. Check brake and throttle cables before each use to insure proper adjustment. Check to ensure that brake and throttle cables are flexible and that the inner cable moves freely within the outer sleeve. Check end of cable to be sure that they are tightly secured to the terminal connections.
2. Check brake pads weekly for wear or damage. Replace immediately at first sign of wear or damage.
3. Check tire pressure weekly and keep inflated to recommended pressure.
4. Lubricate wheel bearings regularly with WD40.
5. It is recommended that you use Locktight on screws to prevent their loss due to motor vibration.

REPLACEMENT PARTS LIST

09003	Brake Pads / 2 per set*
09004	Standard Front Wheel
09005	Standard Rear Wheel
09006	Drive Chain
09007	Brake Lever*
09008	Horn*
09009	Kickstand*
09110	Standard Battery
09011	Throttle Cable with Grip*
09012	Brake Cable*
09013	Fuse*
09014	12V Charger*

CALL REPLACEMENT PARTS ORDERS TO:
Toll Free: 800-533-2929
or online at www.americanpowerproducts.com

American Power Products
5525 Brooks Street
Montclair, CA 91763


VISA, MASTERCARD, AMEX accepted

ALLOW 2 WEEKS FOR SHIPPING WITHIN THE U.S.A.

TROUBLESHOOTING

Number	Problem	Possible Cause	Solution
1	The Scooter motor does not operate.	<ol style="list-style-type: none"> 1. Power switch is off. 2. Fuse has burned out. 3. Batter is undercharged or drained. 	Check and/or replace with 20 amp fuse. Charge or replace the battery
2	The speed control is out of order or the adjustable speed is lower than rated.	<ol style="list-style-type: none"> 1. Battery is undercharged. 2. Check the throttle cable. 	<ol style="list-style-type: none"> 1. Fully charge the battery. 2. Tighten throttle cable.
3	The electric motor stops functioning.	<ol style="list-style-type: none"> 1. The battery wire is loose. 2. Fuse is burned out. 3. Lead wire of the storage battery is broken. 	Repair and reconnect; Replace the blown fuse. Reconnect.
4	The driving distance is less than the rated distance.	<ol style="list-style-type: none"> 1. The tire needs air. 2. Failure of the charger. 3. Failure of the controller. 4. The battery is aged or damaged. 5. Charging and discharging or the new battery is under 10 times. 6. Other factors, low temperature, heavy wind, the condition of the road surface, overweight or overuse of brake. 	Fully inflate the tire. Repair the charger. Change the controller. Change the battery. Charge and discharge the new battery more than 10 times.
5	The battery does not hold charge.	<ol style="list-style-type: none"> 1. The charging socket is loose. 2. Fuse is burned out. 3. The lead of the battery has poor connection. 	Tighten the connection socket. Change the blown fuse. Reconnect.

HANDLEBAR INSTALLATION INSTRUCTIONS

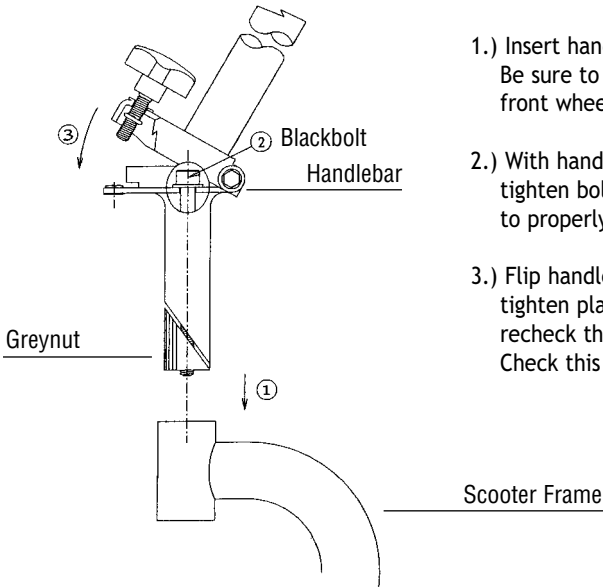

- 1.) Insert handlebar into scooter frame. Be sure to align handlebar assembly with front wheel.
- 2.) With handlebar and front wheel aligned, tighten bolt with key provided. Be sure to properly tighten.
- 3.) Flip handlebar upright and securely tighten plastic wingnut. Be sure to recheck that there is no movement. Check this before each use.

REGISTRATION

RETURN THE ELECTRIC SCOOTER PRODUCT REGISTRATION WITH A COPY OF YOUR SALES RECEIPT TO:*
American Power Products • 5525 Brooks Street, Montclair, CA 91763

Name: _____

Address: _____

City: _____ State: _____ Zip _____

Phone: _____ E-mail: _____

Date Purchased: _____ Model # _____

Store Where Purchased: _____

Store Address: _____

Receipt or Transaction #: _____

This registration must be returned to American Power Products within 10 days of purchase. It is the only information American Power Products will have for notification to you of any information regarding this product. This information is for the sole purpose of product registration and will not be sold or used for any other purpose.

A COPY OF THE SALES RECEIPT AND UPC BAR CODE MUST BE INCLUDED WITH THIS REGISTRATION CARD.

Thank you for purchasing an American Power Products, Inc. Electric Scooter. If there are parts missing, or if your Electric Scooter does not run properly, do not return your Electric Scooter to the place of purchase. Please call American Power Products Customer Service at 800-533-2929

PLEASE DO NOT RETURN PRODUCT TO RETAILER FOR WARRANTY OR REPLACEMENT PARTS
*or register online at www.americanpowerproducts.com using the warranty link
or fax to 909-988-8319



American Power Products, Inc.

LIMITED WARRANTY

Your Electric Scooter is warranted to be free of manufacturing defects in material or workmanship for a period of 90 days. During the warranty period, American Power Products, Inc. will at its option, repair, provide replacement parts or replace your Electric Scooter at no charge. This warranty does not cover normal wear and tear, or damage caused by neglect, or misuse of the product.

Should you experience a problem or need to return your Electric Scooter for repair, please call the American Power Products customer service department TOLL FREE AT 800-533-2929 between the hours of 9AM and 4PM PST Monday thru Friday. You will be instructed how to proceed. A copy of the sales receipt is required. You may also contact American Power Products, Inc. by writing to:

www.americanpowerproducts.com