



Brushless DC (BLDC) Motor

How To Change Motor Direction

Original Direction Wiring

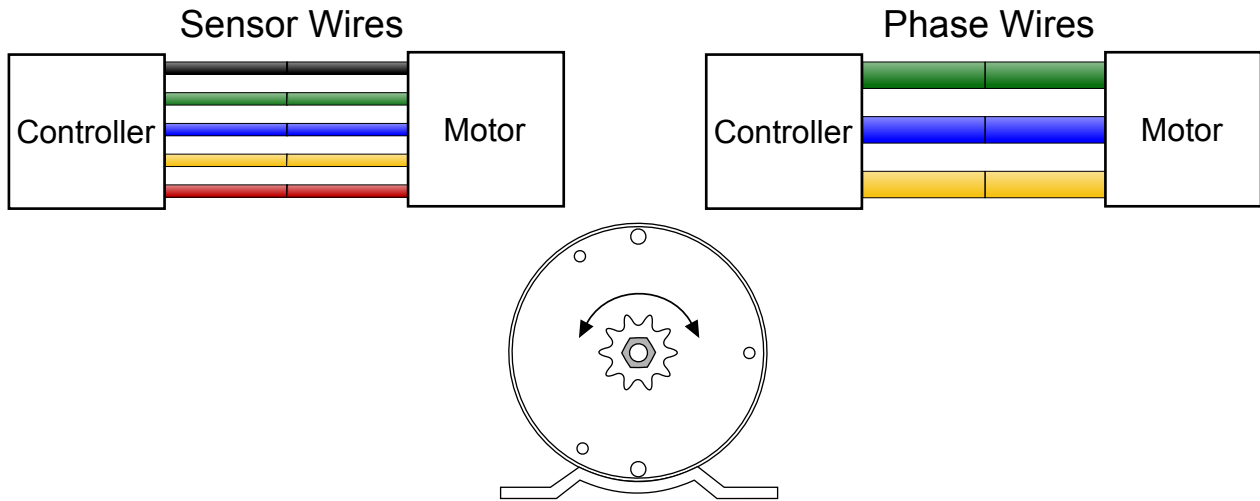

Reverse Direction Wiring

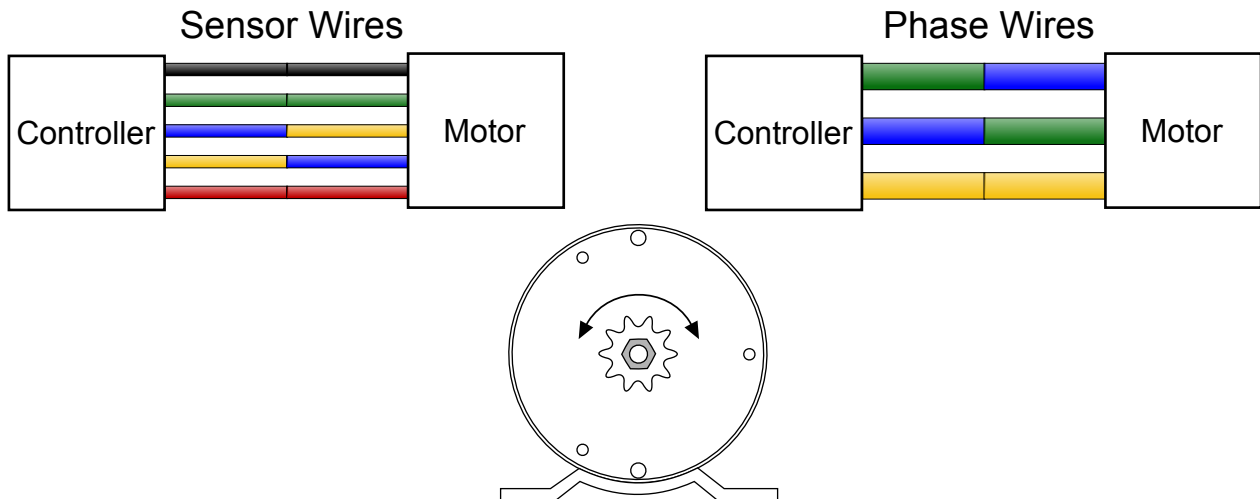

Warning: Never change the positions of the red and black sensor wires. Red must always go to red and black must always go to black otherwise damage to the motor will occur.