SPD-481500BLDC-B 48-72 Volt DC 1500 Watt Brushless DC Motor Controller

For Boma Motors Battery Pack Compatibility: Compatible with 48 Volt, 60 Volt, and 72 Volt Battery Packs
Current Limit: 45 Amps (45 Amps Maximum Current Output)
Low Voltage Protection: 40±0.5V
Sensor Information: Works only with Sensored BLDC Motors
Phase Information: Compatible with 120 Degree and 60 Degree Motor Phases

Power Switch Wires	Purple to Power Switch Contact Red to Power Switch Contact
Input Power Wires	Red Wire to Battery Positive + Black Wire to Battery Negative -
Motor Phase Wires	Yellow to Yellow Motor Phase Wire Blue to Blue Motor Phase Wire Green to Green Motor Phase Wire
† Motor Hall Sensor Wires	Red to Red Motor Hall Wire +5V Black to Black Motor Hall Wire Ground Yellow to Yellow Motor Hall Wire Green to Green Motor Hall Wire Blue to Blue Motor Hall Wire
* Throttle Wires	Red +5 Volt Output Green 1-4 Volt Signal Input Black Ground
† 3 Speed Control Wires	Orange to Black for Low Speed Black to No Wire for Medium Speed Blue to Black for High Speed
† Cruise Control Wires	Orange to Cruise Control Switch Contact Black to Cruise Control Switch Contact
† Reverse Wires	Brown to Reverse Switch Contact Black to Reverse Switch Contact
↑ ~ Switch E-Brake Wires	White to Brake Switch Contact Black to Brake Switch Contact
† ∼ Voltage E-Brake Wire	Yellow to +12 Volt Brake Signal
† Alarm Power Wires	Black to Alarm Positive - Input Red to Alarm Positive + Input
† Alarm Signal Wires	Purple to Vehicle Power On Signal Blue to Motor Disable Signal Brown to Alarm Power On Signal
† Speedometer Wire	Yellow/Green to Speedometer
* Pedal Assist Sensor Wires	Purple 1-4 Volt Signal Input Red +5 Volt Output Black Ground
† Regen Braking Wires	Connect Together for Regen Braking or Leave Disconnected for No Regen Braking
† Start Soft or Hard Wires	Connect Together for Hard Start or Leave Disconnected for Soft Start

† Optional Connections: These wires do not need to be connected for the controller to operate.

~ Use either the Switch E-Brake Wires connector or the Voltage E-Brake Wire connector. Do not use both.

* Either the Throttle and or Pedal Assist Sensor needs to be connected for the controller to operate.

Switch and Voltage E-Brake Wires

1. The Switch and Voltage E-Brake Wires are optional to connect to and the controller will operate normally with nothing connected to them.

2. The E-Brake is designed to help slow the vehicle down, however, not to bring it to a full stop. Mechanical brakes must be used in conjunction with the E-Brake if the E-Brake is used. The E-Brake will be stronger on 48 Volt vehicles than it will on 60 and 72 Volt vehicles which is the nature of multi-Voltage brushless motor controllers.

3. The Switch E-Brake Wires connect to a normally open SPST brake switch.

4. The Voltage E-Brake Wire connect to a +12 Volt DC brake light wire.

5. The E-Brake connectors are optional to use, however, if they are used then use either one or the other, and do not use both of them at the same time.

Cruise Control, Reverse, and 3 Speed Control Wires

1. The Cruise Control, Reverse, and 3 Speed Control Wires are optional to connect to and the controller will operate normally with nothing connected to them.

2. The Cruise Control Wires connect to a 2 position On-Off maintained contact SPST switch.

3. The Reverse Wires connect to a 2 position On-Off maintained contact SPST switch.

4. The 3 Speed Control Wires connect to a 3 position On-Off-On maintained contact SPDT switch.