



# SPD-481800BLDC and SPD-602000BLDC

## How To Change Motor Direction

### Clockwise Direction

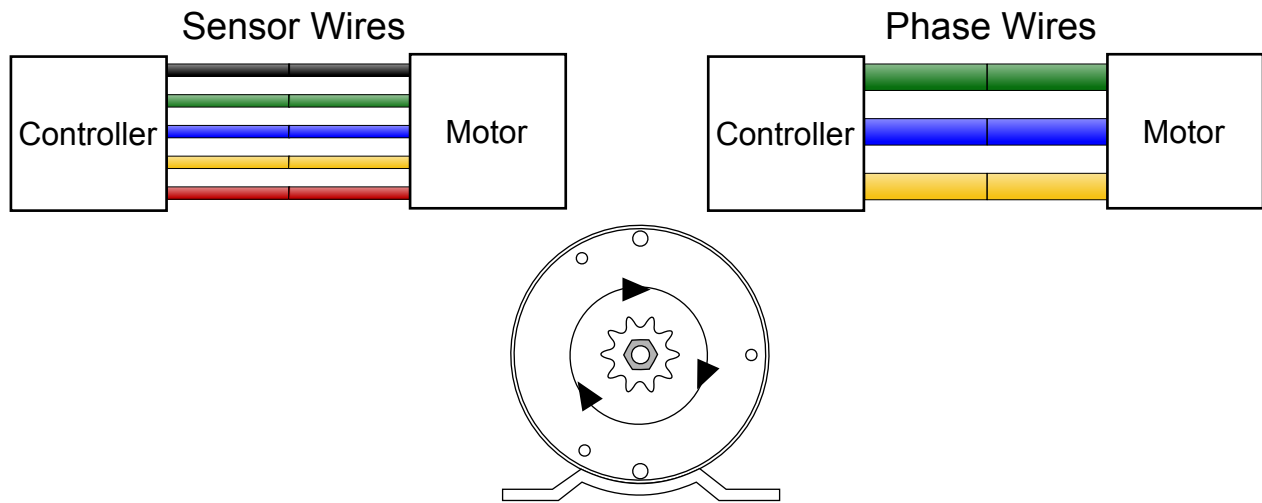

### Counterclockwise Direction

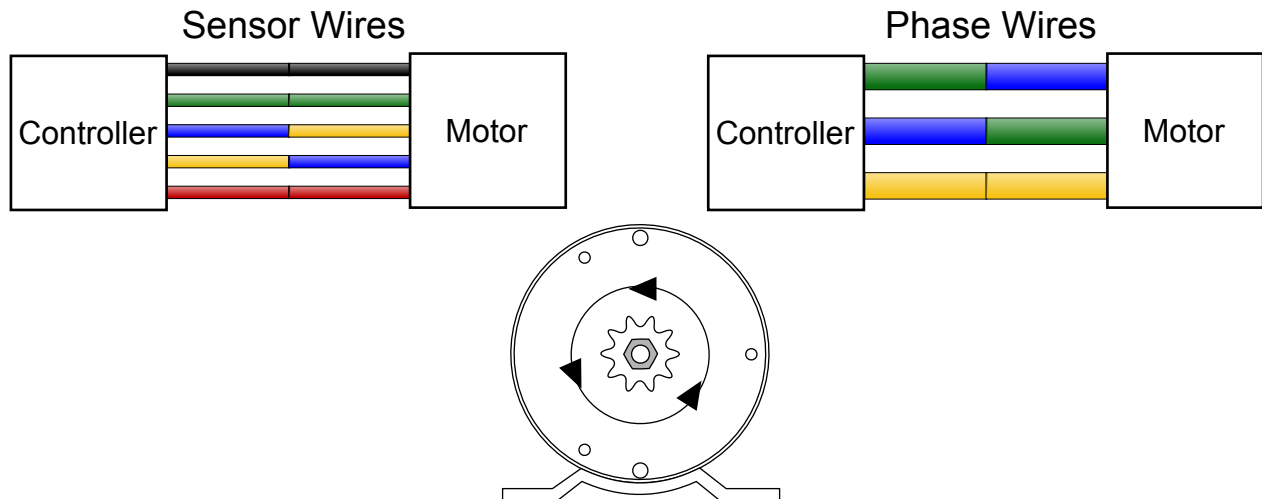

**Warning:** Never change the positions of the red and black sensor wires. Red must always go to red and black must always go to black otherwise damage to the motor will occur.