



SPD-481800BLDC-SL

How To Change Motor Direction

Clockwise Direction

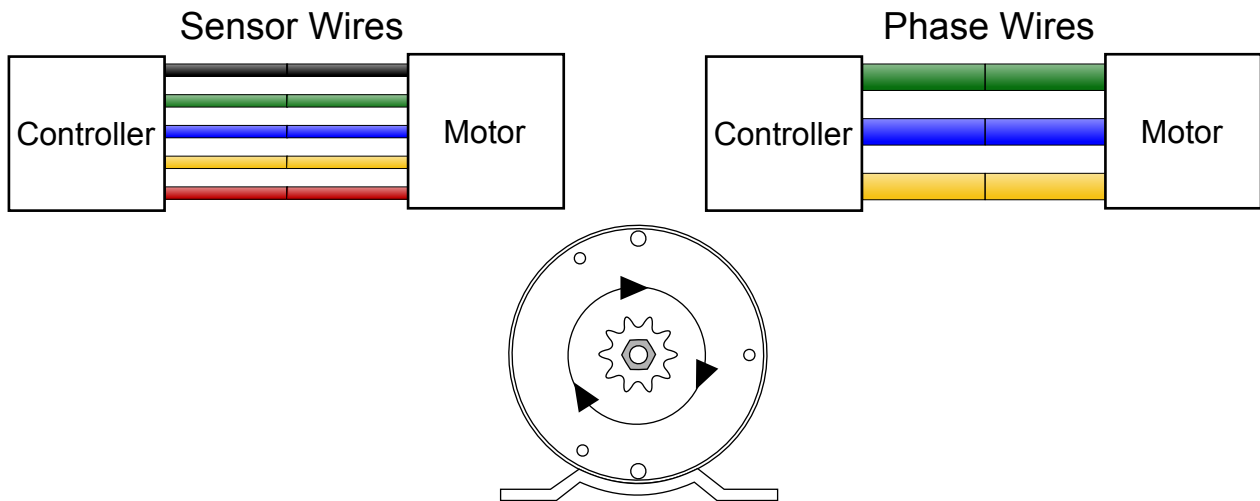

Counterclockwise Direction

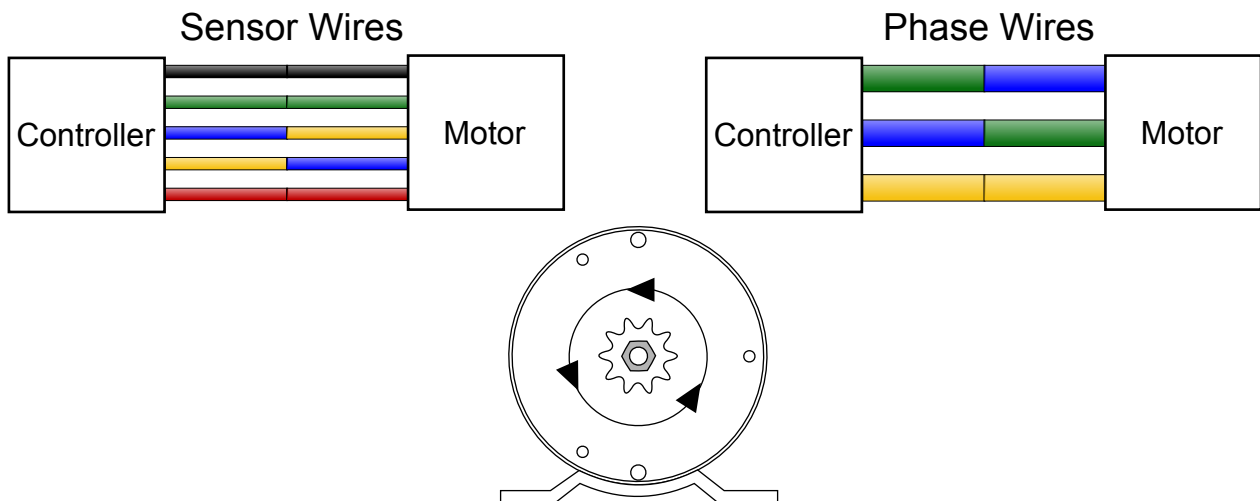

Warning: Never change the positions of the red and black sensor wires. Red must always go to red and black must always go to black otherwise damage to the motor will occur.