
## Improper Connection of Ring Terminals with Heat Shrink Tubing

**Condition:** Ring terminals connected together by a stud do not make proper electrical connection with each other.

 
Cause: Factory installed heat shrink tubing too close to the hole of a ring terminal.

**Correction:** Use a sharp blade to cut the heat shrink tubing back to an acceptable distance from the hole in the ring terminal.

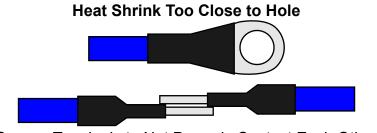

Causes Terminals to Not Properly Contact Each Other





Allows Terminals to Properly Contact Each Other