

Problem	Possible Cause	Correction
1. PHANTOM IV motor does not run	1. Key ignition is in OFF position	1. Rotate Key to ON position
	2. Fuse has burned out/failed	2. Remove, inspect, and replace with additional fuses from tool kit
	3. Battery is undercharged	3. Charge the battery for a sufficient amount of time; replace battery
2. PHANTOM IV does not accelerate	1. Battery is undercharged or completely drained	1. Charge the battery for a sufficient amount of time; replace battery
	2. Electric throttle is not attached or in need of repair	2. Check all throttle connections and wiring; replace throttle if necessary
3. The actual driving range is shorter than the estimated range	1. The tires are under inflated	1. Inflate to proper PSI listed on tire sidewall
	2. The battery is undercharged	2. Charge the battery for a sufficient amount of time; replace battery
	3. Poor riding conditions	3. Do not ride in sand, ice, snow, or unstable riding areas
	4. Weight of rider	4. Mfg. suggest rider not exceed 225 lbs.