


X-560 Assembly Instructions

X-Treme Scooters June 2006
www.x-tremescooters.com/support/

Your X-560 scooter comes 85% assembled. Approximate assembly time = 30 min.

Unpack and locate the following parts:


Tool Kit & Assorted bolt/nuts/washers	Trunk & mounting hardware
Trunk/Cargo Rack	Seat
Seat Post	Rear Tail Light
Left & Right Side Fairings	Assorted Fuses
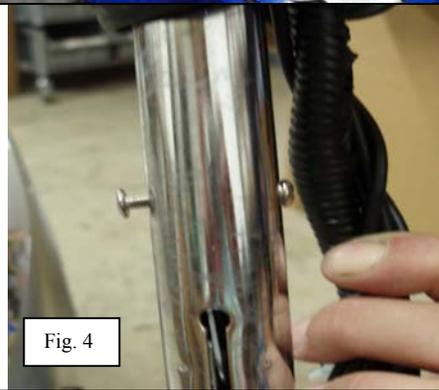
<p>1. Remove the protective seat post.</p>	<p>This is used for shipping only. Discard</p>
<p>2. Install Handlebars.</p> <p>Slide the handlebars onto the fork. See fig. 2 & 3.</p> <p>Locate the Handlebar Lock Pin, and insert it into the side of the handlebar, ensuring it feeds thru the fork bracket. Secure the lock pin using the attached bolt. Fig. 4.</p>	 <p>Fig. 2</p>
 <p>Fig. 3</p>	 <p>Fig. 4</p>
<p>Slide the handlebar clamp up and over the base of the handlebar. Tighten the clamp ensuring the front wheel is in proper alignment with the handlebars. Fig. 5.</p> <p>After the handlebar is securely attached, slide the black rubber boot over the connection.</p>	 <p>Fig. 5</p>

X-560 Assembly Instructions

3. Attach Throttle and Brake Handle Grips.

Insert handle grips into the handlebar post, ensuring the gold lock pin protrudes thru the post. Tighten the black, handlebar thumbscrew securely. Fig. 6.

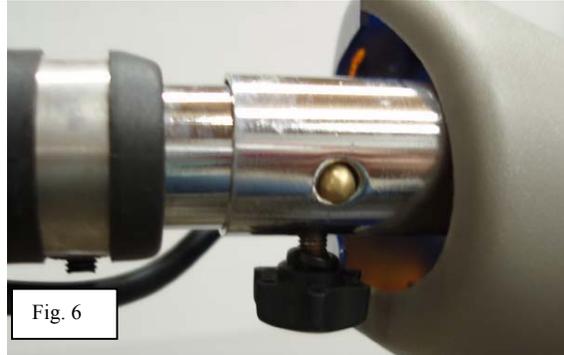


4. Attach Left/Right Side Fairings.

Locate the following for each side:
3-1cm machine screws and nuts.
1-1.5cm sheet metal screw
1-2cm Allen head screw

Using the three, 1cm machine screws, attach the side fairing to the plastic silver fairing, securing it with the enclosed lock nuts. Fig. 7

Use the one, 1.5cm metal screw to attach the fairing to the metal frame. Fig. 8.

Use the one, 2cm Allen head screw to attach the fairing to the real metal bracket. Fig. 9.

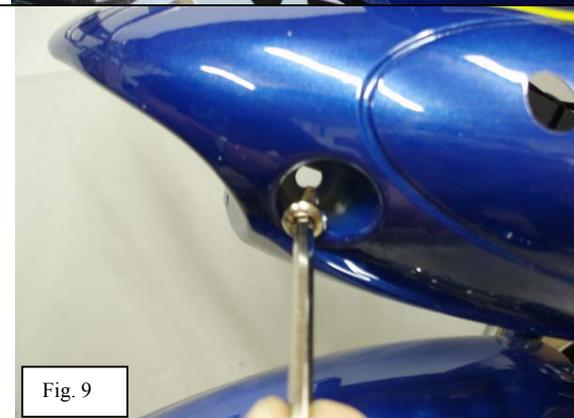

X-560 Assembly Instructions



5. Mount the Trunk/Cargo Rack

Locate the rear trunk rack bolt. Remove the bolt and set aside. Do not discard! Fig. 10

Attach the rack to the seat post. Fig. 11.

Re-install the trunk rack bolt securing the rack to the rear of the scooter. Fig. 12.

*Optionally mount the rear trunk to the rack using the trunk hardware provided.

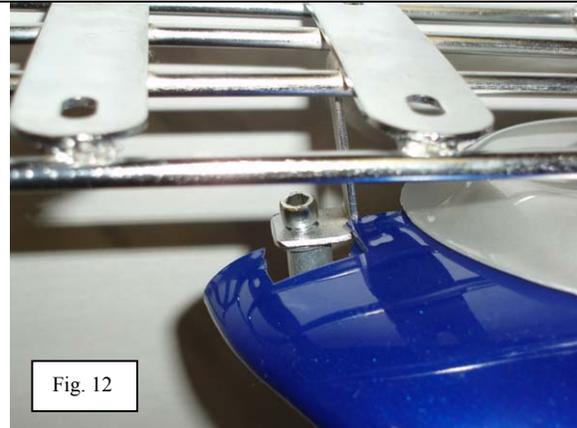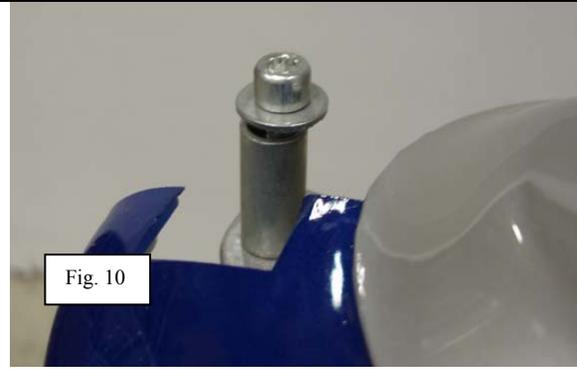

6. Mount seat to seat post and install seat.

Attach the seat post to the bottom of the seat using the three enclosed washers and nuts. Fig. 13

Insert seat/post into the post receiver, adjust to the desired height and tighten the clamp securely. Fig. 14



X-560 Assembly Instructions

7. Install rear tail light.

Insert wire with plug end thru the hole, and connect. Fig. 15.

Mount tail light by inserting the bolts thru the two holes and secure with the attached nuts. Fig. 16.

Correctly mounted view. Fig. 17



Fig. 15



Fig. 16



Fig. 17

8. Insert the 25amp glass fuse.

Locate the spare fuses that came with your scooter. On the right side of your scooter, you will find the fuse holder. Remove the lid, Insert the fuse into the lid, then into the fuse holder. Turn gently to secure. Do not overtighten.



Should you require extra assistance from our tech support department, please visit them by going to www.x-tremescooters.com/support/, and opening a support ticket. Be sure to include all information necessary for them to contact you.