




Back of Motor

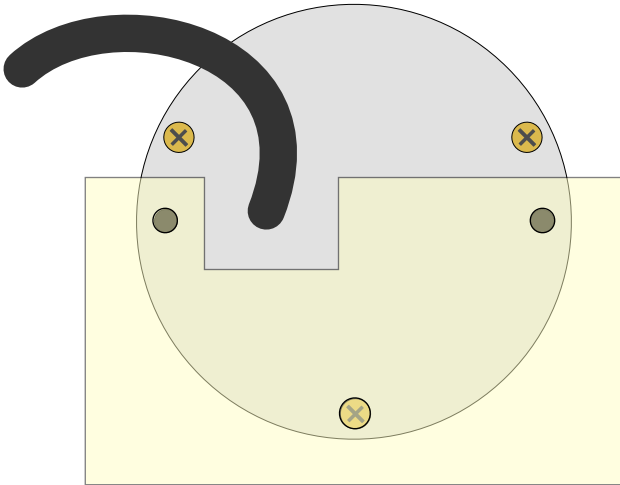

Template Made Using  
Motor's Bolt Holes and  
Bolt Head As a Guide

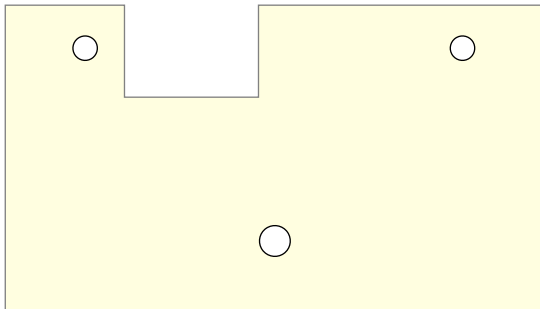

Template Removed  
from Motor and Ready  
to Transfer to the  
Swingarm

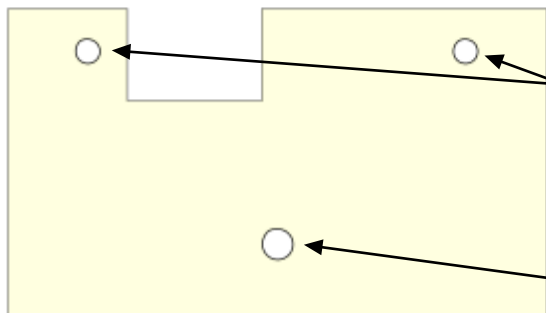

Align template to the swingarm using the motor's mounting bolts.

Use a permanent marker or scribe to transfer this hole to the swingarm and then drill out the marked area of the swingarm.



Cut on the red dotted lines to remove bar between mounting tabs.

Cut on the red dotted lines to remove the bar between the mounting tabs, otherwise this bar will be in the way of the motor's power cable.